

Effective 1 March 2002 RDS Vehicle Maintenance Schedule
All Operators are responsible for turning in vehicles to Operations Team Leader for service.

5,000 Miles

Change engine Oil and replace oil filter
Rotate tires
Inspect and lubricate automatic transmission shift leakage
Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.
Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.
Lubricate rear drive shaft double cardan joint centering ball.

10,000 Miles

Change engine oil and replace oil filter.

15,000 Miles

Change engine oil and replace oil filter.
Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.
Rotate tires.
Inspect and lubricate automatic transmission shift leakage
Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.
Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.
Lubricate rear drive shaft double cardan joint centering ball.

20,000 Miles

Change engine oil and replace oil filter.

25,000 Miles

Change engine oil and replace oil filter.
Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.
Rotate tires.
Inspect and lubricate automatic transmission shift leakage
Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.
Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

30,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

35,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

40,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

45,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

50,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

55,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift leakage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

60,000 Miles

Change engine oil and replace oil filter.

Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles or 12 months.

Rotate tires.

Inspect and lubricate automatic transmission shift linkage

Lubricate steering linkage suspension, drive shaft U-joint if equipped with grease fittings.

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Effective 1 March 2002